

Távirányító segédlet

Varga András Távirányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	AKAI ATE-24014CNK TV		AKAI ATE-24014CNK DVD					
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Standby		Standby	Eject				
AV	Input		Input					
TEXT	Text		Title	Prog				
TV	TV/Radio	Media	Intro					
	Sleep	Time Shift						
	Subtitle		Subtitle					
	T_Size		Zoom	Angle				
	Prev Pr.		Repeat	A-B				
	Subpage							
	T_Reveal		Slow					
	T_Hold		Stop					
	T_Index		Play/Pause					
	Red		Record					
	Green		Rev					
	Yellow		Play/Pause					
	Blue		Fwd					
	S.Mode	Audio	Language					
	▲		▲					
	P.Mode	Aspect	Setup					
	◀		◀					
OK	OK		OK					
	▶		▶					
MENU	LCD Menu		Menu					
	▼		▼					
EXIT	Exit							
VOL+	Vol+		Vol+					
	Display		Display					
CH+	CH+	Fav+	Next					
VOL-	Vol-		Vol-					
MUTE	Mute		Mute					
CH-	CH-	Fav-	Prev					
1	1		1					
2	2		2					
3	3		3					
4	4		4					
5	5		5					
6	6		6					
7	7		7					
8	8		8					
9	9		9					
	-/--	Guide	-/--					
0/10	0		0					
	Fav	Auto	Goto					