
 







 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	HARMAN-KARDON AVR85							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power On	Power Off						
AV								
TEXT								
TV								
	Sleep							
		Test Tone						
								
								
	Skip-	Speaker-						
	Skip+	Speaker+						
	RDS Disp							
	PTY							
		Night						
	Tune-	Delay						
	AF	RF						
	Tune+							
	FM Mode	Stereo						
		Matrix						
		Hall						
		P/L						
OK	Select	3ST						
		Movie						
MENU								
		AC-3						
EXIT								
VOL+	Volume+							
	Display	OSD						
CH+	Preset+							
VOL-	Volume-							
MUTE	Mute	CH Select						
CH-	Preset-							
1	1	VID1						
2	2	VID2						
3	3	VID3						
4	4	TV						
5	5	DVD						
6	6	AM/FM						
7	7	CD						
8	8	TAPE1						
9	9	TAPE2						
	Memo	OPT						
0/10	0	COAX						
	P-Scan	MULTI						