

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Open/Close	Open/Close						
AV								
TEXT	Title	Prog						
TV	Pre/Tune	N/P						
								
	Subtitle							
	Zoom	Angle						
	Repeat	A-B						
	Slow							
	Return	Resume						
	Stop							
	Pause/Step							
								
	Rev	Prev						
	Play							
	Fwd	Next						
	Audio	Prologic						
								
	Setup							
								
OK	Enter	Memo						
								
MENU	Menu							
								
EXIT	Auto							
VOL+	Volume+							
	Display							
CH+	CH+	Next						
VOL-	Volume-							
MUTE	Mute	R/L						
CH-	CH-	Prev						
1	1	DVD						
2	2	TUNER						
3	3	SCART						
4	4	AUX1/2						
5	5							
6	6							
7	7	FM Mode						
8	8							
9	9							
	+10							
0/10	0							
	CH.Set	Goto						