

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

| Layout Keys | TV | | VCR/DVD | | SAT | | AUX | |
|----------------|-------------|----------|---------|-------|--------|-------|--------|-------|
| | WD WD-02 | | | | | | | |
| | Direct | Shift | Direct | Shift | Direct | Shift | Direct | Shift |
| | Power | | | | | | | |
| AV | | | | | | | | |
| TEXT | | | | | | | | |
| TV | | | | | | | | |
| | | | | | | | | |
| | Subtitle | | | | | | | |
| | | | | | | | | |
| | Back | | | | | | | |
| | | | | | | | | |
| | Stop | | | | | | | |
| | Play/Pause | | | | | | | |
| | | Red/B | | | | | | |
| | Rev | Green/A | | | | | | |
| | Play/Pause | Yellow/C | | | | | | |
| | Fwd | Blue/D | | | | | | |
| | Audio | | | | | | | |
| | | | | | | | | |
| | Setup | | | | | | | |
| | | | | | | | | |
| OK | OK | | | | | | | |
| | | | | | | | | |
| MENU | Menu | | | | | | | |
| | | | | | | | | |
| EXIT | Back | | | | | | | |
| VOL+ | Next Page | | | | | | | |
| | Options | | | | | | | |
| CH+ | Next | | | | | | | |
| VOL- | Prev Page | | | | | | | |
| MUTE | Mute | | | | | | | |
| CH- | Prev | | | | | | | |
| 1 | 1 | | | | | | | |
| 2 | 2 | | | | | | | |
| 3 | 3 | | | | | | | |
| 4 | 4 | | | | | | | |
| 5 | 5 | | | | | | | |
| 6 | 6 | | | | | | | |
| 7 | 7 | | | | | | | |
| 8 | 8 | | | | | | | |
| 9 | 9 | | | | | | | |
| | Search | | | | | | | |
| 0/10 | 0 | | | | | | | |
| | Eject | | | | | | | |